

006	Unit inoperative. Contact the technical department.	HIGH	Blower fault.	Check blower connections and replace blower if necessary.
	Unit inoperative.			Check incinerator valve