



PRIMUS 1058
STATUS 1080
GLOBUS 1078

AP Position LED = blinkt / blinking
Sicherheitsabschaltung / safety cut-out

